




**Adjustable Set Point Air Pressure Sensing Switch with Gold Contacts**

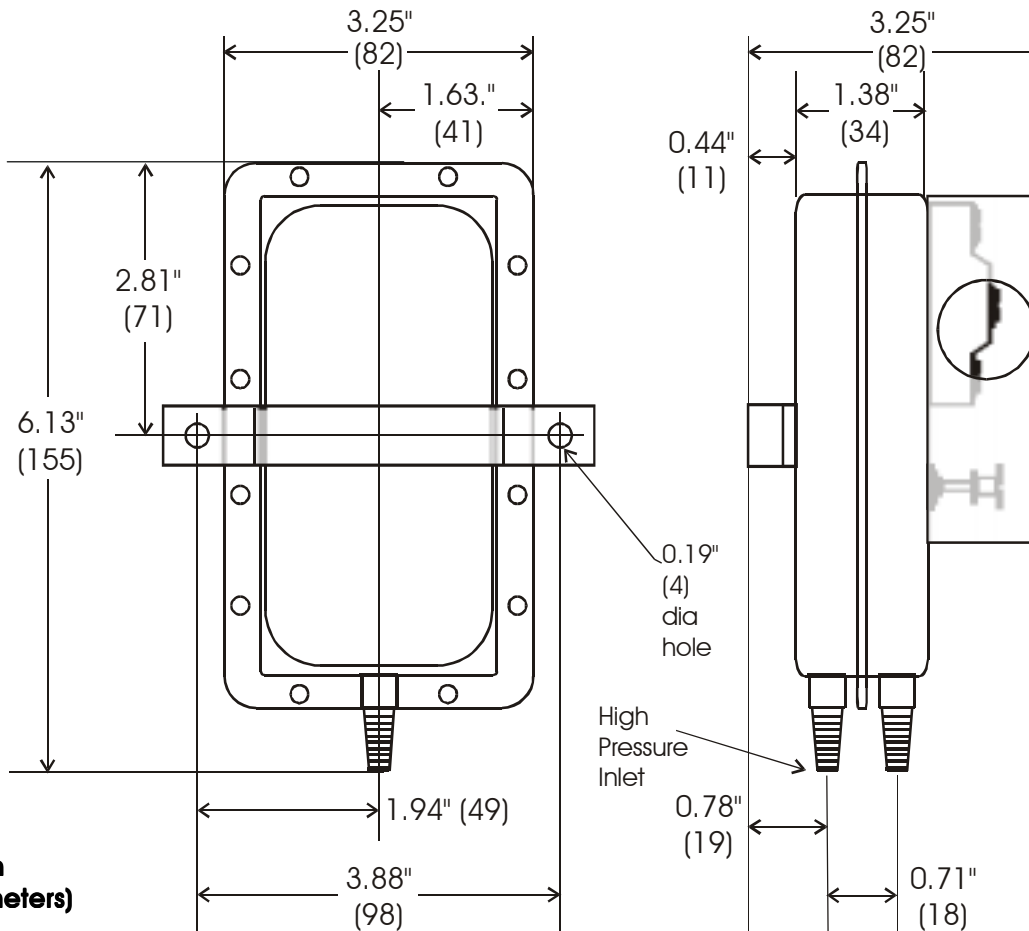

**Dimensions in Inches (Millimeters)**

**Application**

The **Model AFS-477-112** is a general purpose proving switch with gold contacts designed for HVAC, Energy Management and **DDC** (Direct Digital Control) applications. Gold-contact switches are commonly used in computer environments, direct digital control, or wherever low ampere currents are wired. It may be used to sense positive, negative, or differential air pressure. The **AFS-477-112** is equipped with convenient barbed sample line connectors that accept flexible tubing.

**Description & Operation**

The plated housing contains a diaphragm, a calibration spring and a snap-acting SPDT switch with gold contacts. The sample connections lo-

cated on each side of the diaphragm accept 1/4" OD metallic tubing via the integral compression ferrule and nut. An enclosure cover guards against accidental contact with the live switch terminal screws and the set point adjusting screw. The enclosure cover will accept a 1/2" conduit connection.

**Mounting ( Fig. 1 )**


Select a mounting location which is free from vibration. The **AFS-477-112** must be mounted with the diaphragm in any vertical plane in order to obtain the lowest specified operating set point. Avoid mounting with the sample line connections in the "up" position. Surface mount via the two 3/16" diameter holes in the integral mounting bracket. The mounting holes are 3-7/8" apart.

**Air Sampling Connection ( Fig. 2 )**

The **AFS-477-112** is equipped with two slip-on sample line connectors, situated on either side of the diaphragm as shown in **Figure 2**. These connectors are suitable for flexible tubing.


Locate the sampling probe a minimum of 1.5 duct diameters downstream from the air source. Install the sampling probe as close to the center of the airstream as possible. Refer to **Figure 2** to identify the high pressure inlet (**H**) and the low pressure inlet (**L**). Select from the five application options listed below, and connect the sample lines as shown.

(Figure 1)

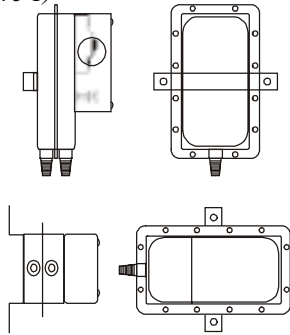


Mount with the diaphragm in any vertical plane to obtain the lowest specified operating set point.

(Figure 2)

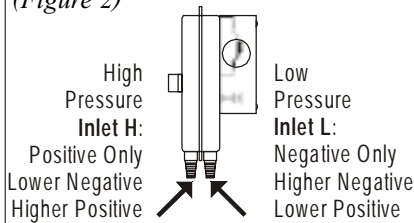


(Figure 3)

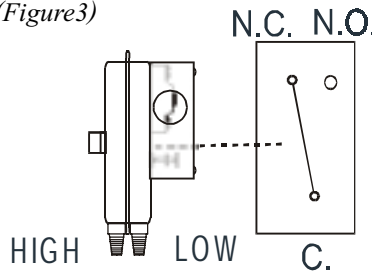


(Figure 4)

To prove excessive air flow or pressure:

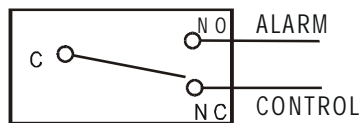

 To prove insufficient air flow or pressure:



### Location of Sample Lines for Typical Applications

<p>FAN OPERATION OR TRUE AIR FLOW WITH LITTLE OR NO STATIC PRESSURE.</p> <p>PROBE MUST BE PERPENDICULAR TO FLOW.</p>	<p>FAN OPERATION OR AIR FLOW WITH NO STATIC PRESSURE.</p>	<p>PROVE POSITIVE STATIC PRESSURE</p>
<p>FAN OPERATION AND TRUE AIR FLOW WITH VARYING AMOUNTS OF STATIC PRESSURE.</p> <p>PROBE MUST BE PERPENDICULAR TO FLOW.</p>	<p>SUCTION OR FAN OPERATION</p>	<p>NEGATIVE PRESSURE INCREASES AS FILTER GETS DIRTY.</p> <p>FILTER</p>

**POSITIVE PRESSURE ONLY:** Connect the sample line to inlet H; inlet L remains open to the atmosphere.

**NEGATIVE PRESSURE ONLY:** Connect the sample line to inlet L; inlet H remains open to the atmosphere.

**TWO NEGATIVE SAMPLES:** Connect the higher negative sample to inlet L. Connect the lower negative sample to inlet H.

**TWO POSITIVE SAMPLES:** Connect the higher positive sample to inlet H. Connect the lower positive sample to inlet L.

**ONE POSITIVE AND ONE NEGATIVE SAMPLE:** Connect the positive sample to inlet H. Connect the negative sample to inlet L.

### Electrical Connections (Fig. 3)

Before pressure is applied to the diaphragm, the switch contacts will be in the normally closed (NC) position. The snap switch has screw top terminals with cup washers. Wire alarm and control applications as shown in Fig.4.

### Field Adjustment

The adjustment range of an AFS-477-112 Air Switch is 0.05±.02" w.c. to 2.0" w.c. To adjust the set point, turn the adjusting screw counterclockwise until motion has stopped. Next, turn the adjusting screw 4 complete turns in a clockwise direction to engage the spring. From this point, the next ten turns will be used for the actual calibration. **Each full turn represents approximately 0.2" w.c.**

**Please note:** To properly calibrate a Air Switch, a digital manometer or other measuring device should be used to confirm the actual set point.

### Specifications

#### Model AFS-477-112 Gold Contact

#### Air Pressure Sensing Switch

**Mounting Position:** Mount with the diaphragm in any vertical plane.

**Set Point Range:** 0.05 ± 0.02" w.c. to 2.0" w.c.

**Field Adjustable "Operate Range":** 0.07" w.c. to 2.0" w.c.

**Field Adjustable "Release Range":** 0.04" w.c. to 1.9" w.c.

**Approximate Switching Differential:** Progressive, increasing from 0.02± 0.01 "w.c. at minimum set point to approximately 0.1 " w.c. at maximum set point.

**Measured Media:** Air, or combustion by-products that will not degrade silicon.

**Maximum Pressure:** 1/2 psi (0.03 bar)

**Operating Temperature Range:** -40F to 180F (-40 to 82C)

**Life:** 100,000 cycles minimum at 1/2 psi maximum pressure each cycle and at maximum rated electrical load.

#### Electrical Rating:

300 VA pilot duty at 115 to 277 VAC, 15 amps noninductive to 277 VAC.

10 ma at 5 VDC (applies to dry circuit applications.)

**Contact Arrangement:** SPDT

**Contact Material:** gold

**Electrical Connections:** Screw-type terminals with cup washers.

**Conduit Opening:** 7/8" diameter opening accepts 1/2" conduit.

**Sample Line Connectors:** Two barbed 1/4" connectors will accept flexible tubing.

**Sample Line Connections:** Connectors will accept 1/4" OD rigid or semi-rigid tubing.

**Approval:** UL, CSA, CE

**Shipping Weight:** 1.2 lbs.

### Accessories

- Sample line probes.
- Orifice plugs (pulsation dampers)
- Consult factory for special features, packaging, and labeling services.



**Cleveland Controls**  
Division of UniControl Inc.

1111 Brookpark Rd Cleveland OH 44109

Tel: 216-398-0330

Fax: 216-398-8558

Email:

saleshvac@unicontrolinc.com

Web page:

<http://www.clevelandcontrols.com>